




## Exterior Shutters Instructions

Tools Needed: Tape Measure, Pencil, Drill

1

Place the shutter next to the window and mark desired location against the wall or window. See Figure at right.

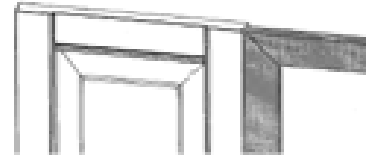

2

For smaller sizes use four screws per shutter. For large sizes 55" and over, use six screws per shutter. Screws should be selected based on your home's siding material.

3

To help ensure proper alignment mark or pre-drill holes using a 1/4" drill bit into the shutter before attaching it to the wall.

4

With the shutter in location against the wall, drill through the shutter into the wall surface 2 3/4" deep. Make sure you drill holes deep enough so the screw doesn't bottom out.

5

Grasp the screw supporting shank and push it through the shutter hole and into the wall surface. Tap the screw gently with a hammer to snug the shutter against the siding. Do not over tighten.

